


Suction Inlet filter. This filter must be replaced or cleaned when the pressure drop exceeds 4.3 psi.



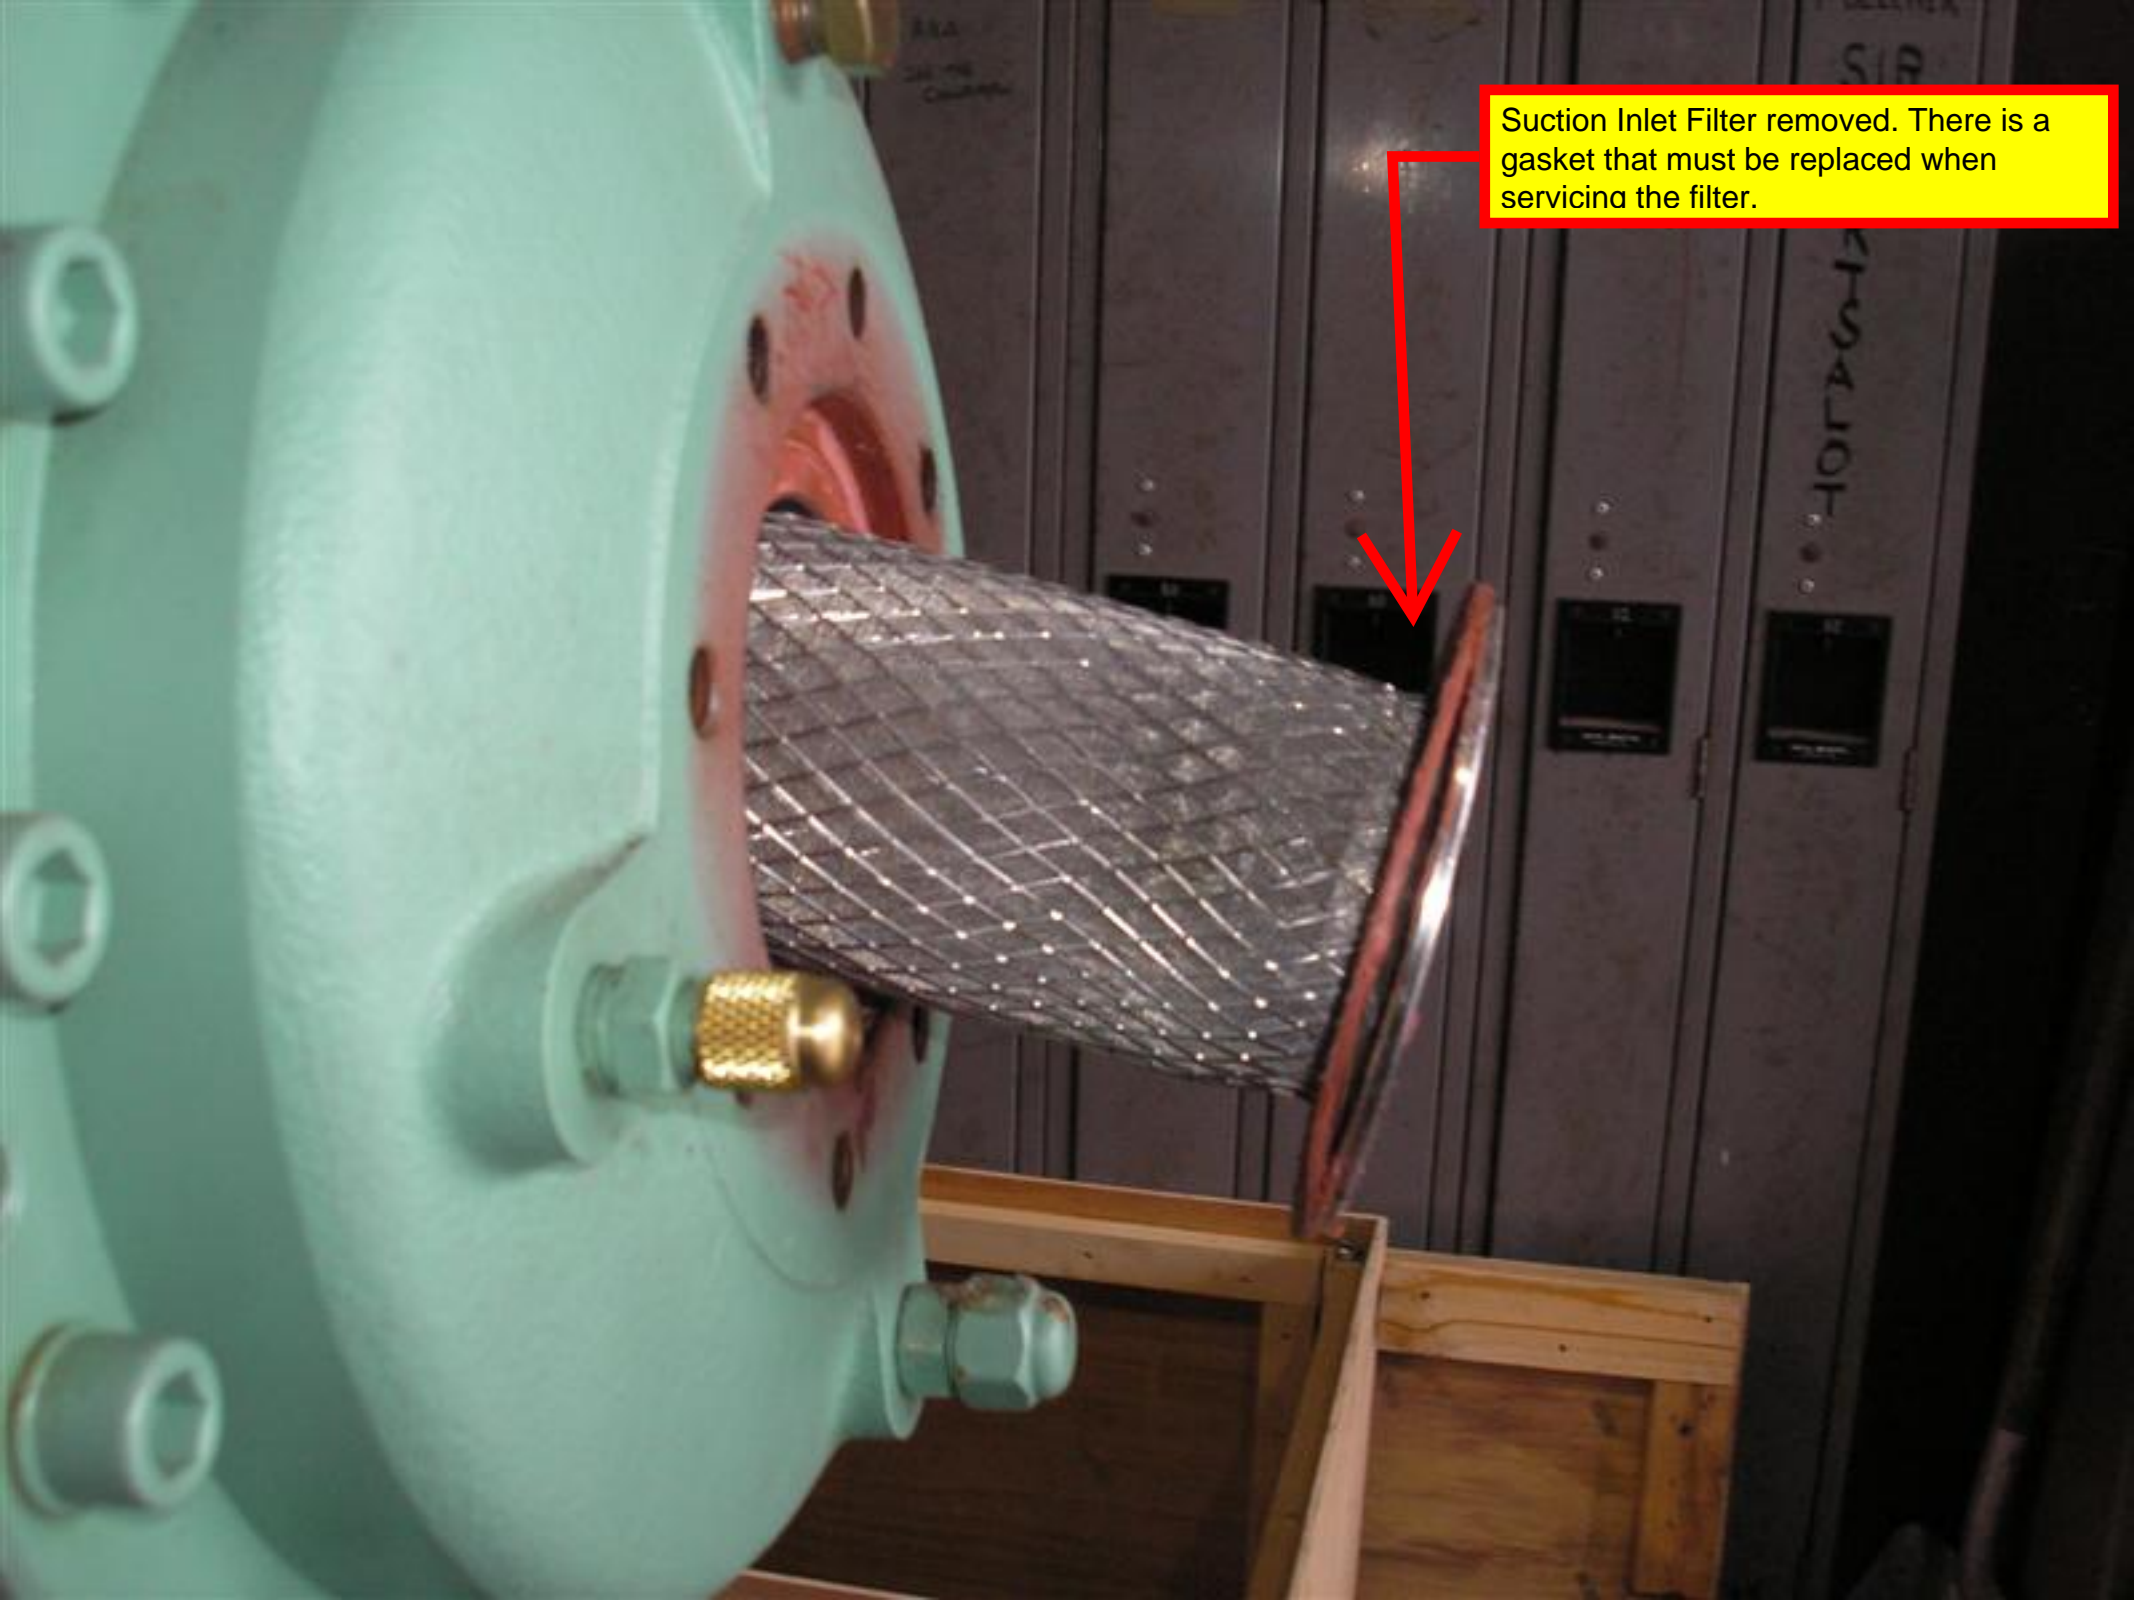

Suction Inlet Filter removed. There is a gasket that must be replaced when servicing the filter.