

N.C. UNLOAD SOLENOID

N.O. LOAD SOLENOID

High Discharge Gas Temperature Thermostat. Part of the passive oil protection system.

ECONOMISER GAS INLET REFER TO DRAWINGS FOUND IN THE SR COMPRESSOR INSTRUCTION MANUAL FOUND IN THE PARTS AND SERVICE PAGE ON

OIL SUPPLY TO THE CAPACITY CONTROL

HIGH PRESSURE SAFETY CUT OUT CONTROL

OIL CHANNEL ACCESS VALVE. THIS PORT IS AFTER THE OIL FILTER AND TIES INTO THE INTERNAL OIL SUPPLY LINE

HIGH PRESSURE MEASURING PORT

HIGH PRESSURE SAFETY CONTROL PORT

OIL LEVEL SIGHT GLASS. OIL IS JUST ABOVE TOP OF GLASS WHEN COMPRESSOR IS IDLE. LEVEL IS HALF FULL WHILE COMPRESSOR

LIQUID INJECTION IS CONNECTED TO THE 3/8 FLARE FITTING LOCATED ON THE END BELL. REFER TO THE DETAILED PORT DRAWING AND COMPONENTS NEEDED TO INSTALL A LIQUID

OIL FILTER FLANGE PLATE. REMOVE THIS PLATE TO

CAUTION
MAXIMUM PRESSURE
BEFORE
REMOVAL OF
COMPONENT.

