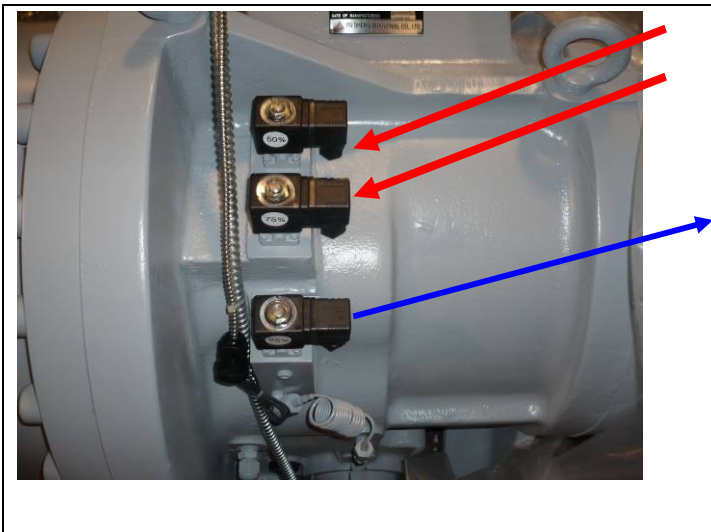
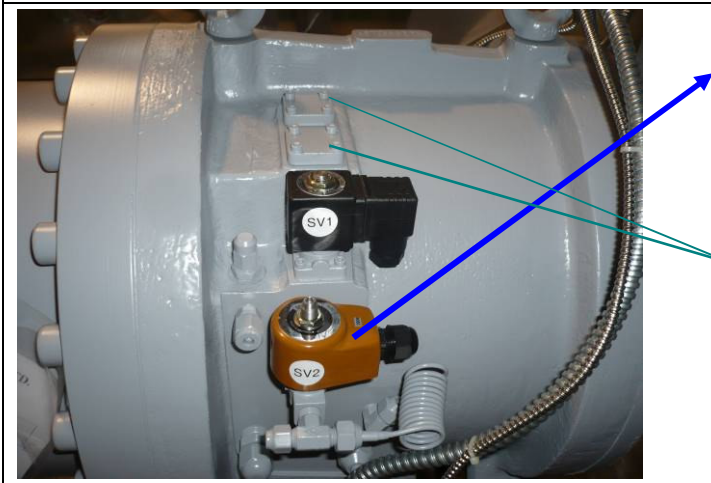
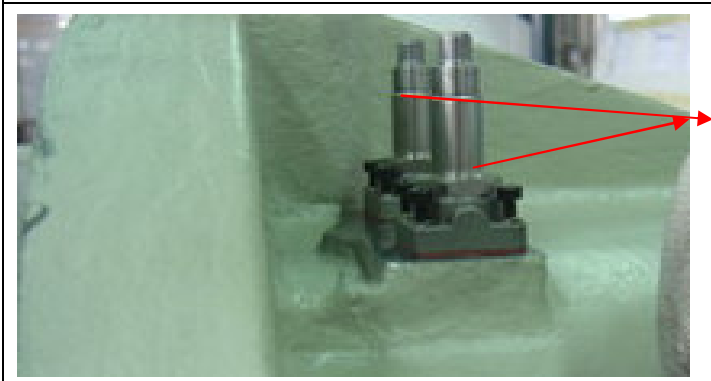


Procedure for step capacity contro lchang to stepless control

	<ol style="list-style-type: none">1. Photo #1.2. Just remove the coil of NC solenoid valve 50% and 75%. Keep the body on the compressor, as photo #3 shown.3. Keep the solenoid valve 25% as usual. No need to change it.
	<ol style="list-style-type: none">1. Photo #2.2. Installing the NO solenoid valve (stepless solenoid valve). This is stepless control.3. Blind flanges.
	<ol style="list-style-type: none">1. Photo #3.2. If you don't have the blind flange and gasket3. Just remove the coil (black shell one) and make these two valves in de-energized circumstance.